

PENTAX®

PF

Pentax Functions

Z-1P / PZ-1P

Pentax Function Control Chart


①	Control	
②	③	Operation

① : Pentax Function Number

② : Selection Number

③ : LCD panel indication

HOW TO SET

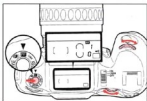

1. Set the mode dial to [**PF**].
2. Turn the Tv direct dial while holding down the mode set button until the desired function number appears.
3. To set the selection number, turn the Av dial while holding down the mode set button.

①	PCV signal function selection	
0	←	PCV beeps
1		PCV does not beep
②	Exposure mode selection	
0	HvP M	Hyper Program, Aperture-Priority AE
1	HvPAM R / I	All exposure modes
③	Exposure compensation step selection	
0	0.3	0.3EV step
1	0.5	0.5EV step
④	Shutter speed step selection	
0	/	1EV step
1	0.5	0.5EV step

5	Choice of automatic T_v/A_v shift in H _v P AE mode	
0	H _v P RS	Shifts T_v and A_v automatically
1	H _v P no	Will not shift automatically
6	Choice of T_v/A_v shift when IF button is depressed in H _v M mode	
0	H _v M P	According to program line
1	H _v M ES	Shifts T_v ; locks A_v
2	H _v M EE	Shifts A_v ; locks T_v
3	H _v M no	Locks both A_v and T_v
7	Choice of T_v/A_v shift in flash use in H _v M or 250 mode	
0	:F [Ⓢ]	According to program line
1	:F $T_v A_v$	Shifts T_v and A_v to obtain correct exposure for background
8	Film speed setting priority	
0	a RS	Automatic film-speed setting (DX-coded film)
1	a US	Allows user-defined film speed setting

9	Choice of [ML] button function	
0	ML	Exposure is locked upon ML button depress
1	ML RF	Locks focus and AE by depressing ML button
10	Shutter release choice before Built-in flash is full charged	
0	[Ⓢ] L	Shutter does not release
1	[Ⓢ]	Enable shutter release
11	Film rewinding choice upon rewinding completion	
0	a	Film rewinds fully into cartridge
1	a---	Leaves film leader outside film cartridge
12	Film rewinding choice at end of roll	
0	a--- R	Rewinds film automatically
1	a--- M	Manual start of rewinding
13	Choice of autofocus when power zoom operates	
0	RF	Focuses automatically
1	no	Will not focus automatically

14	Choice of zooming direction of Zoom effect	
0	a ∅	Zooms automatically from WIDE to TELE
1	∅ a	Zooms automatically from TELE to WIDE
15	Choice of power zoom operation during the exposure	
0	■ no	Disables zooming during the exposure
1	■	Enables zooming during the exposure